



PRODUCT DIAGRAM

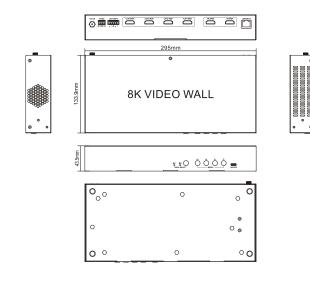

Package Accessories:

HDMI video wall x1	Mount ear x2
Power supply x1	Oser Manual x1

INSTALLATION

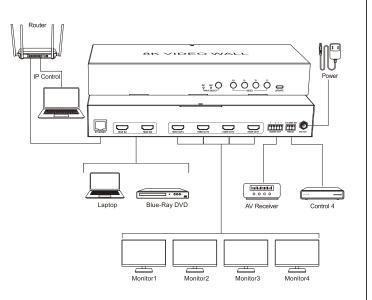

Operating and Connecting:

 Connect one cable from each HDMI source devices to HDMI input.
Connect one cable from each display (monitor or projector) to the HDMI outputs.

NOTES

Please use this machine based on below instructions to keep longer lifetime.

- 1. The machine should be placed at the spot far away from the Damp, High-Temperature, Dusty, Erosive, and Oxidant environment.
- 2. All parts will be free from the strong shake, hit, fall.
- 3. Touching the device with the wet hands is prohibited.
- 4. Please turn power off when machine is not used for long time.
- 5. Please do not open the cover and do not touch the inside parts.
- 6. Please use the original factory power adaptor.
- 7. Before power on, please check the connection cable carefully. And make sure that all interfaces are normally connected.

CONTACTS

When you need any technical assistance, please send e-mail

to lawn@greatprospe.com

Visit to learn more.

www.greatprospe.com

IP CONTROL

Connect the USB or RS232 to PC, using the RS232 interface to send command" EZG HIP", you will get the IP address of the matrix. Make sure your PC and the matrix on the same network. Typing in the IP address in a browser Note: please begin with http:// e.g: You get a IP address 192.168.101.20 please typing in http:// 192.168.101.20 And you will see four sections

Video wall mode select(a right EDID(resolution) will be set when you select a mode).



User Manual

lawn@greatprospe.com www.greatprospe.com