

PtInstallation Guide



1.Install screws to fix the projector

OChange Gobo



2.Power On



 Adjust the image definition by rotating the zoom lens



1.Power Off



2.Loosen the screws and take out the heat sink



4.New gobo face the hole of the second layer

B Remote Controller



4. Fix the heat sink onto the lamp body & fasten the screws



3.take out the old gobo and install the new gobo (Right side face bottom)

CAUTION The first layer cannot be rotated by anti-colckwise

