


## SMT Feeder Calibration jig

---Can be suitable for variety feeders.

### Do you always meet the following problem?

- Feeder feeding position has a deviation?
- High deposit rate ?
- Patch of defective rate is high ?
- Greatly influence the production efficiency ?

Why not use a smart machine to solve this problem for you ?

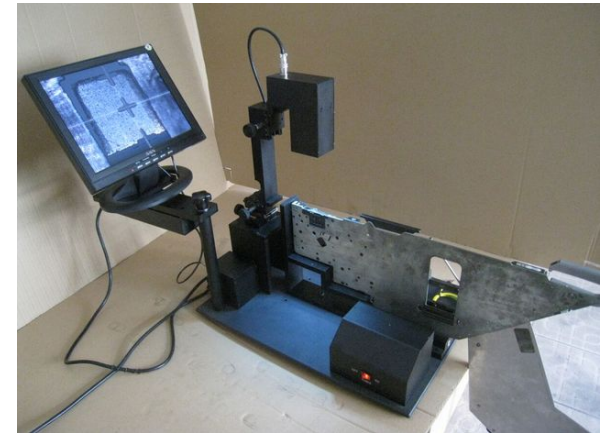


### SMT FEEDER CALIBRATION JIG.:

Bringing you convenience, shortcut and inerrability of using the SMT FEEDER Calibration Jig. To help you more progress controls the SMT FEEDER.

## Specification:

- Working Voltage : 220V/AC(50Hz) 60W
- Machine Size : 350\*500\*550 mm
- Machine Weight : 45Kg

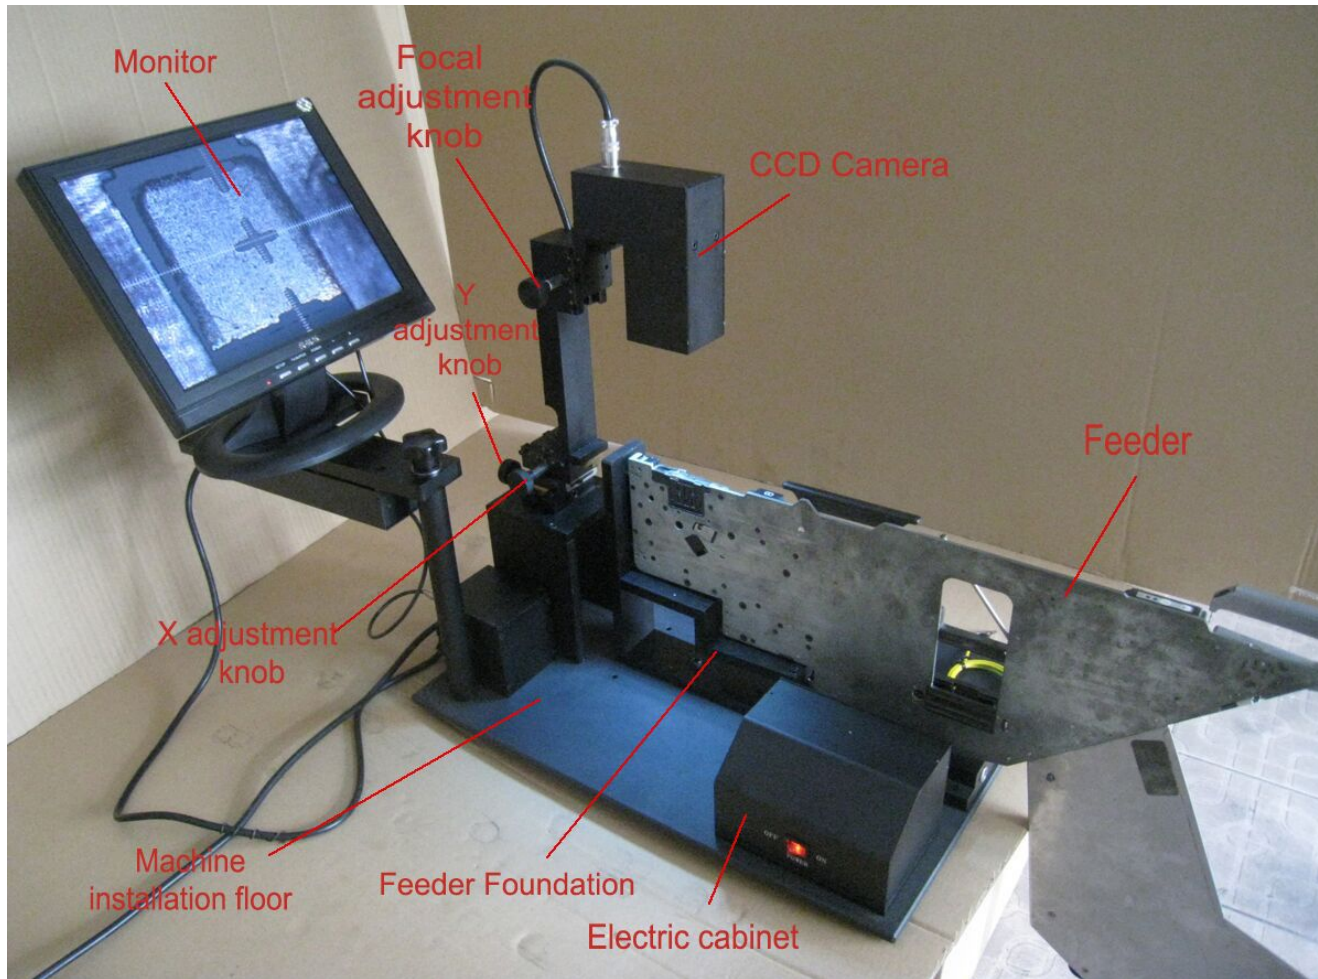

## SMT Feeder Calibration jig

### Specification:

- Working Voltage: 220V/AC(50Hz) 60W
- Material : aluminum and iron
- Air Pressure: 5KG/cm<sup>2</sup>
- Visual System: 50 times magnification CCD camera
- Lighting system: Ring the LED lighting
- Display system: Ultra bright LED color display
- Feeding control: Precise 8 \*2mm /12 \*4 mm /  
16 \* 8mm and 24\*8mm feeder control zone
- Power supply: 220V, 50Hz
- Machine Size: 350\*500\*550 mm
- Weight: 45Kg



## Characteristics:

- The operation is simple, the external appearance is simple and cleverly.
- X, Y, H -three stalks, adoption Japan importing and the high accuracy wheel gear drive, precision and credibility.
- 50X CCD;with LED lighting, appearance clearer.
- Install dynamoelectric, single and continuous strike LEVER, simulate machine action.
- Observing the wheel gear dynamic state step the conditions.
- With standard calibration Ruler to adjust component central.

## Simple Operating:

- 1.Switch on: use the Jig. correct signal wire connects into the display VIDEO plug,confirming power supply, correct connects into the power supply and monitor.
- 2.Press power switch, the Jig. Press-pole has not original position, will return to original position automatically. The display will show cross cursor, The Jig. Completed self-check.
- 3.POWER (ON/OFF) power switch: Use to control machine power switch, Press ON direction, the machine connects into power supply, pressing OFF direction, breaking the machine power supply .

Check our Facebook home page

- "**Auto Insertion**"

can find more informations you need.

Chan:

Skype :jasonwuuic

Email :[info@smthelp.com](mailto:info@smthelp.com)

Phone/Whatsapp :+86 13602562576

**Shenzhen Southern Machinery Sales and Service Co., Ltd**

Southern  
Machinery